

## **U470**MODEL 70

## TACTICAL QUAD RAILS

- Fits Yugoslavian M70 and Variants
- Precision Machined by State-of-art CNC Machines with Tightest Tolerance Control
- Innovative Top and Bottom Covers with Mating Features and Precison Tolerance
- Four Mil-spec Picatinny Rails with Integrated QD Swivel Housings on Left/Right Rails for Versatile Accessory Applications
- Simple and Friendly Installation, No Gunsmith or Tool Required
- Innovative Design without Interference with Grenade Sight or Under-folded Stock
- Solid Locking Features for Most Secure Fit

MUM016011012

- Ultimate Tactical Solution to Enhance Accuracy under Toughest Environments
- Hardcoat Anodized Finish for Wear Resistancee



MODEL 70
TACTICAL QUAD RAILS

Made in USA







1. Separate the pre-assembled mount and arrange all parts on a flat surface.

2. Remove the Cleaning Rod 3. Press the Release Button from the rifle.

to lift and remove the receiver cover.


Caution: Make sure firearm is not loaded. Remove magazine and examine chamber. Use safe handling procedures at all times.

MTU011

**Shown with UTG Scope and Accessories** 





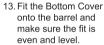




14. Fit the Top Cover onto the gas tube. Make sure the two Connecting Walls of the Bottom Cover fit into the two Mating Channels of the Top Cover.



15.Evenly tighten all four screws to securely lock the top and bottom covers.

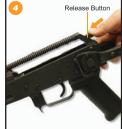

4. Push the Release Button 5. Remove the bolt and again to lift and remove the action spring and the retaining rod.




the bolt carrier, including the gas piston attached to the bolt carrier.



6. Open the grenade sight. Lift and push forward the Gas Tube Lever next to the Rear Sight Block and take out the Gas Tube/Upper Handguard Assembly.






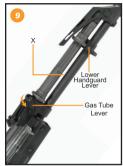





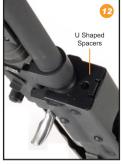

Unlock the Lower Handguard Lever on the Lower Front Cap. Remove the Lower Handguard.

8. Twist the Upper Handguard 9. Lock the Lower to separate the handguard from the gas tube.

Handguard Lever on the lower front cap. Replace the gas tube and lock it down by turning the Gas Tube Lever back and downward.

10.Replace the bolt and bolt carrier, action spring and retaining rod, and the receiver cover. Make sure everything works smoothly.

11. Place the 2 Barrel Spacers 12. Fit as many U Shaped between the barrel and the gas tube at position X shown in 9 . Tighten the 2 screws to lock the spacers firmly. The Barrel Spacers will prevent over tightening of the top/ bottom covers and allow for normal operation of the piston.

Spacers as needed at the front of the receiver before rails are installed. The spacers should be inserted into the U shaped opening to ensure a tight fit against the barrel.